



**TRILLIUM HERITAGE
BATH MODEL WINTERIZING GUIDE**




1300 & 4500 MODELS

BEFORE YOU BEGIN:

1. Follow the steps demonstrated in our Basic Plumbing and Water Heater Winterization Videos found on the Maintenance Page.
2. Gather your materials, available at most hardware stores. You will need:




1 jug of RV antifreeze

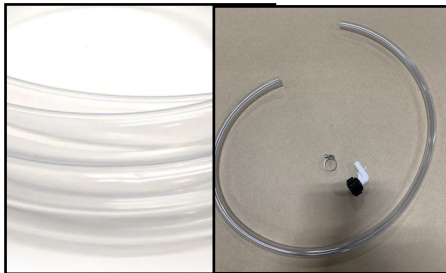


5 ft of clear vinyl tubing, 1/2" diameter

1/2" Adaptor (FNPT) Plastic PEX Swivel Elbow

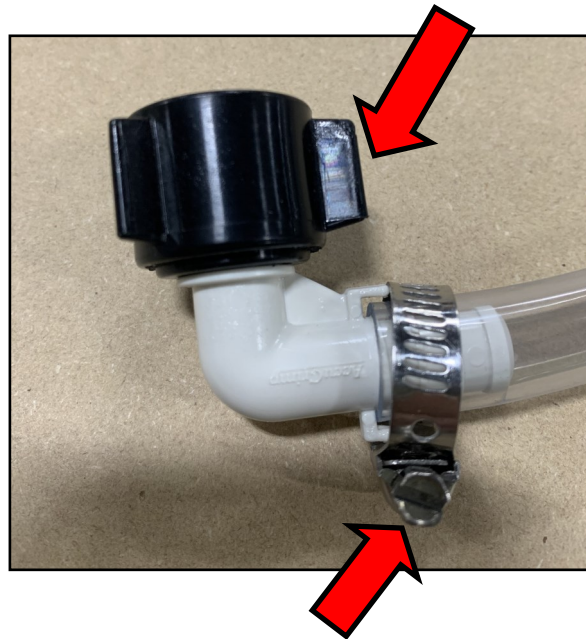


1/2"-1-1/4" Steel Gear Clamp

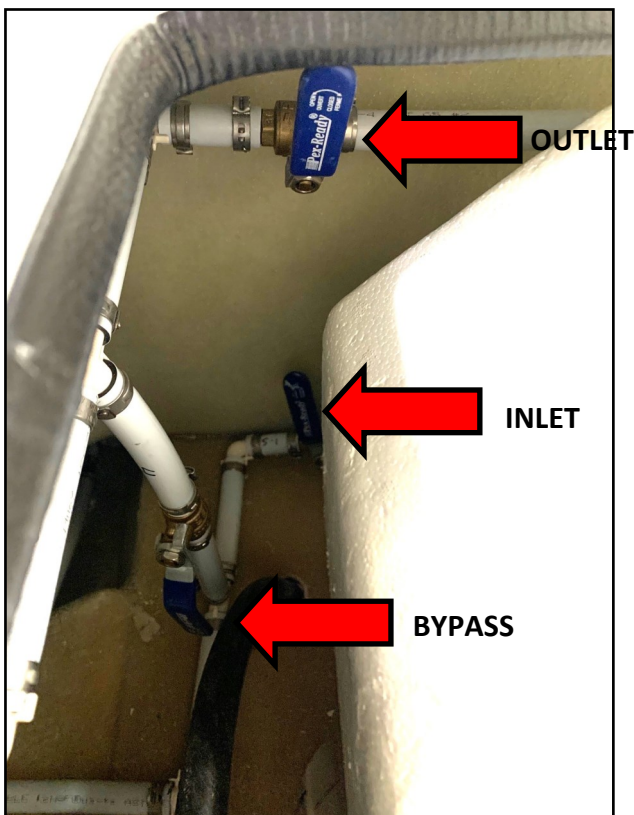

STEP 1: ADJUST THE VALVES

1. Close the Water Heater inlet and outlet valves, which (which were left open when winterizing the Water Heater).
2. Make sure the bypass valve remains open.

STEP 2: CONNECT PIPE AND HOSE

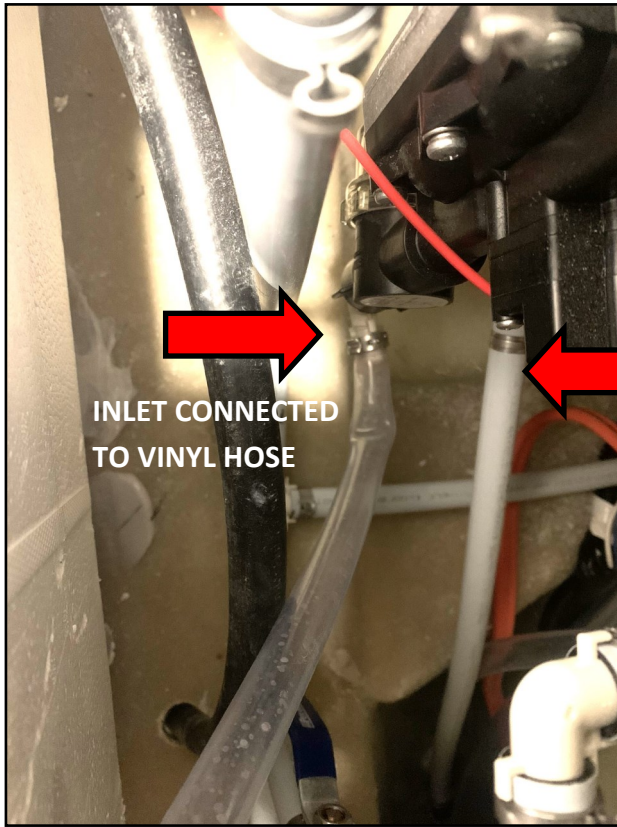


INLET CONNECTED
TO VINYL HOSE

OUTLET PIPE

1. Reconnect the outlet pipe on the top of the water pump.
2. Attach the PEX Swivel Elbow to the vinyl tube using the gear clamp as shown under the Materials section. Attach the vinyl tube to the inlet connection at the bottom of the water pump.

STEP 3: PUSH ANTIFREEZE THROUGH THE SYSTEM


1. Place open end of PVC hose in antifreeze.

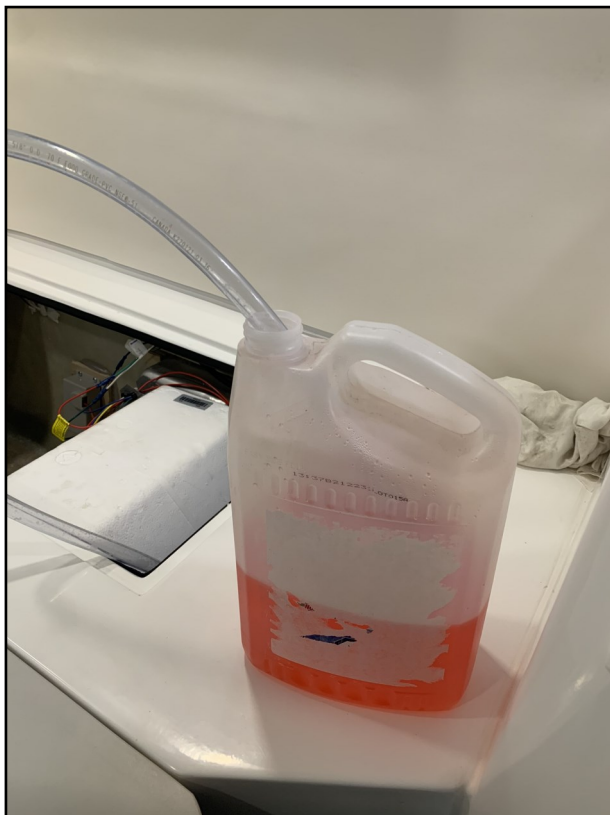

2. Turn on the water pump to draw antifreeze through the pump to the kitchen sink



3. Turn on the kitchen faucet until you see antifreeze in the sink.

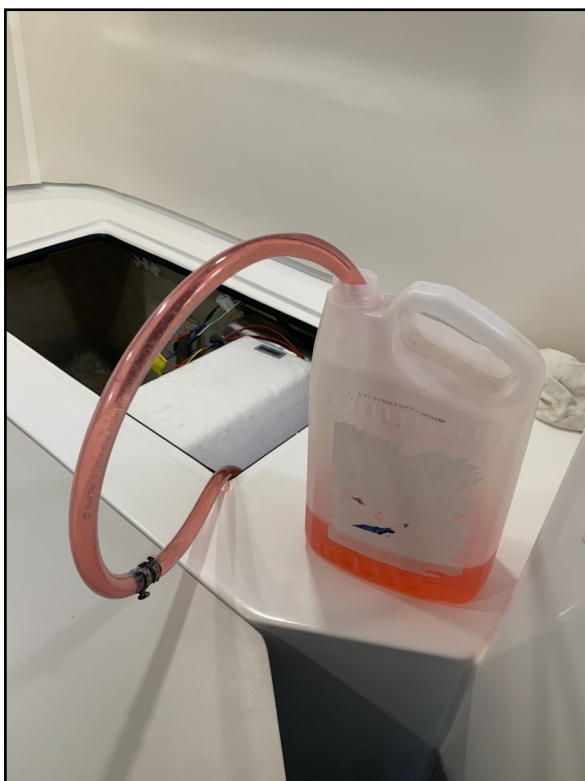

4. Turn on the shower until you see antifreeze in the shower basin.



5. Flush the toilet. You should see antifreeze in the basin. Then empty the basin.



6. Pour some antifreeze into the shower basin drain so that the sump pump flushes antifreeze into the grey water tank.



7. Open the grey water tank drain on the outside of the camper.

